

Berntsen®

Recommended Installation Tools & Accessories



Steel Stamp Set




Carsonite Boundary Marker Post



DEEP1 Magnets

Berntsen®

Marking the Infrastructure of the World.™

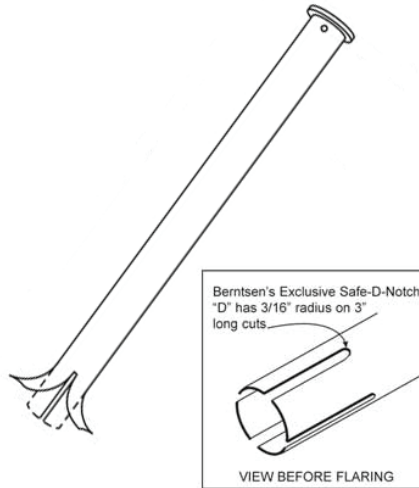

REMEMBER:

*"Any Monument Is Only As Good As
How It Was Set."*

Questions or Comments?

Contact us at:

Berntsen International, Inc.
PO Box 8670
Madison, WI 53708-8670

Call: (800) 356-7388
Fax: (800) 249-9794
surveymark@berntsen.com

All tools available at www.berntsen.com

www.berntsen.com

Berntsen®

Marking the Infrastructure of the World.™



Installation Instructions

Pipe Monuments

Models: A1, A1BR, A2BR, A3BR,
A1NB, A1NBF, IPNB, IPNBF, SSBNB,
SSBNBF

Materials Required for Setting Monument:

1. Monument
2. Shovel
3. Post Hole Digger
4. Work gloves and proper eye protection
5. Steel Stamp Set **
6. DEEP-1 Magnetic Marker (Optional) for models A1NB, A1NBF, IPNB, IPNBF, SSBNB, SSBNBF

****IMPORTANT: Stamp majority of information on the cap prior to installation.**



Monument Installation Instructions:



1. Using a posthole digger or shovel, dig a six-inch (150mm) diameter hole to desired depth (minimum depth should be monument length plus one inch).
2. **Optional step for Models A1NB, A1NBF, IPNB, IPNBF, SSBNB, SSBNBF:** Install DEEP-1 Magnetic Marker in bottom of hole, placing the black end down. This provides a subsurface mark as a precaution against the monument being moved or destroyed.

3. Place monument in hole and start backfilling. Be cautious with A1BR, A2BR and A3BR as these have the Break-Off bases attached.
4. Backfill and tamp securely around the monument, tamping as you fill. Compacting around the monument firmly will insure horizontal and vertical stability.

REMEMBER: "Any Monument Is Only As Stable As Its Backfill."

